




Montážní návod K2097

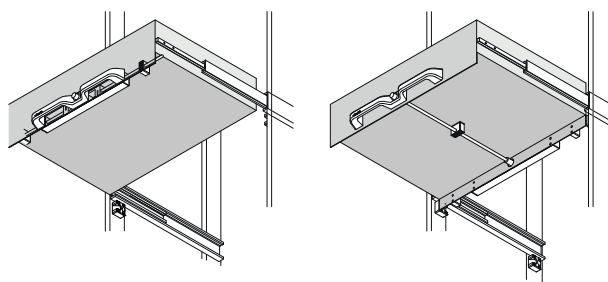


K2097.060
K2097.120

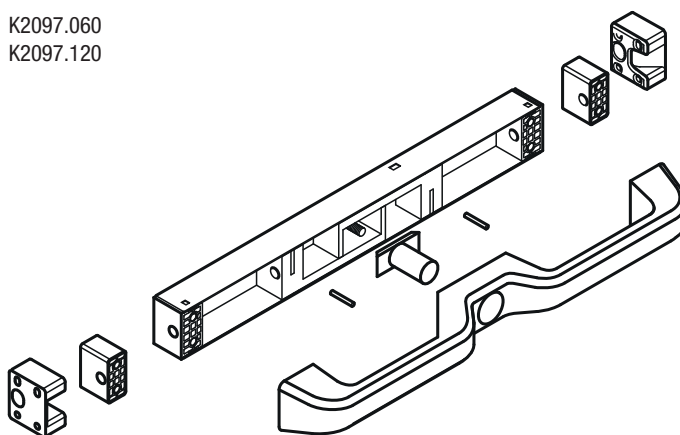


K2097.91

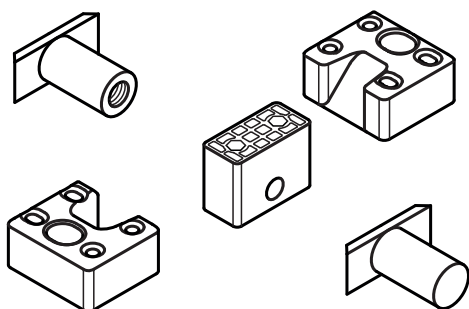


K2097.900500
K2097.900750
K2097.910500
K2097.910750

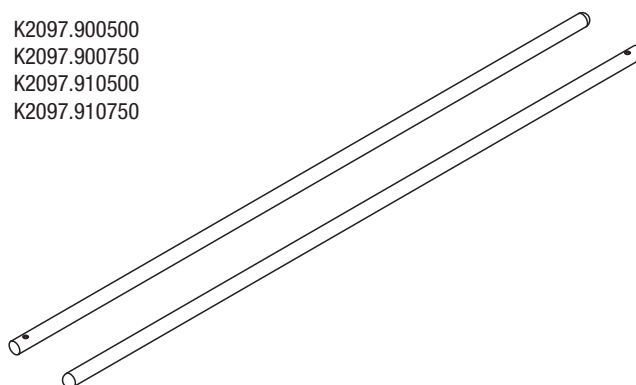

K2097.60 + K2097.900500 nebo K2097.910500
K2097.120 + K2097.900750 nebo K2097.910750

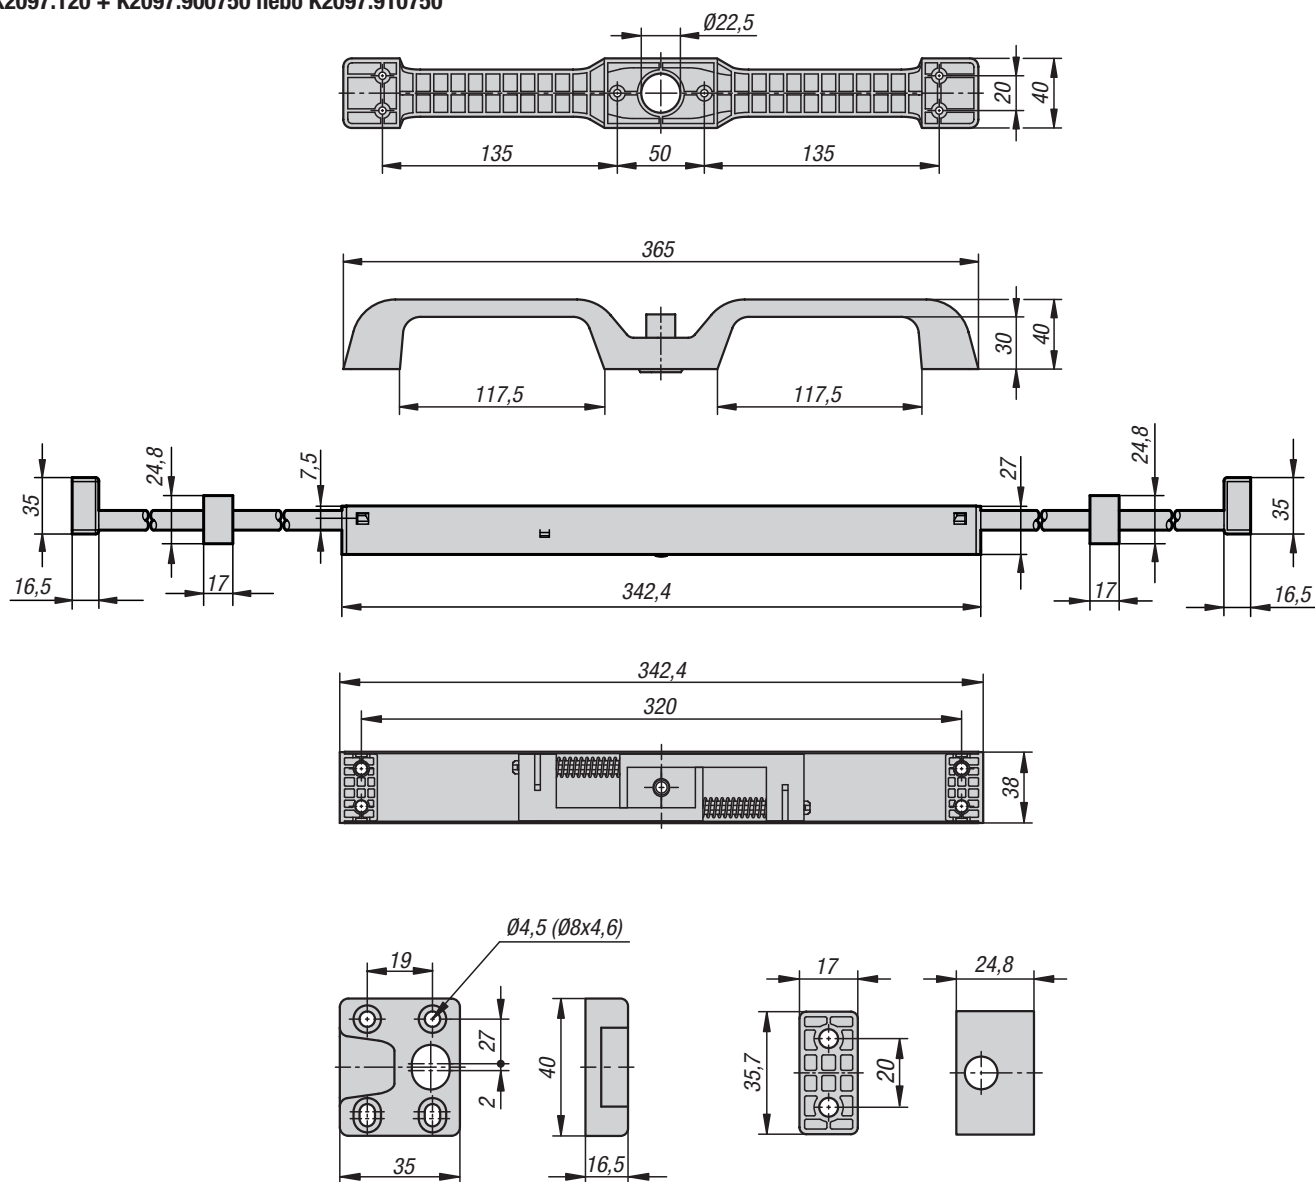


K2097.60 + K2097.900500
nebo K2097.910500 + K2097.91
K2097.120 + K2097.900750
nebo K2097.910750



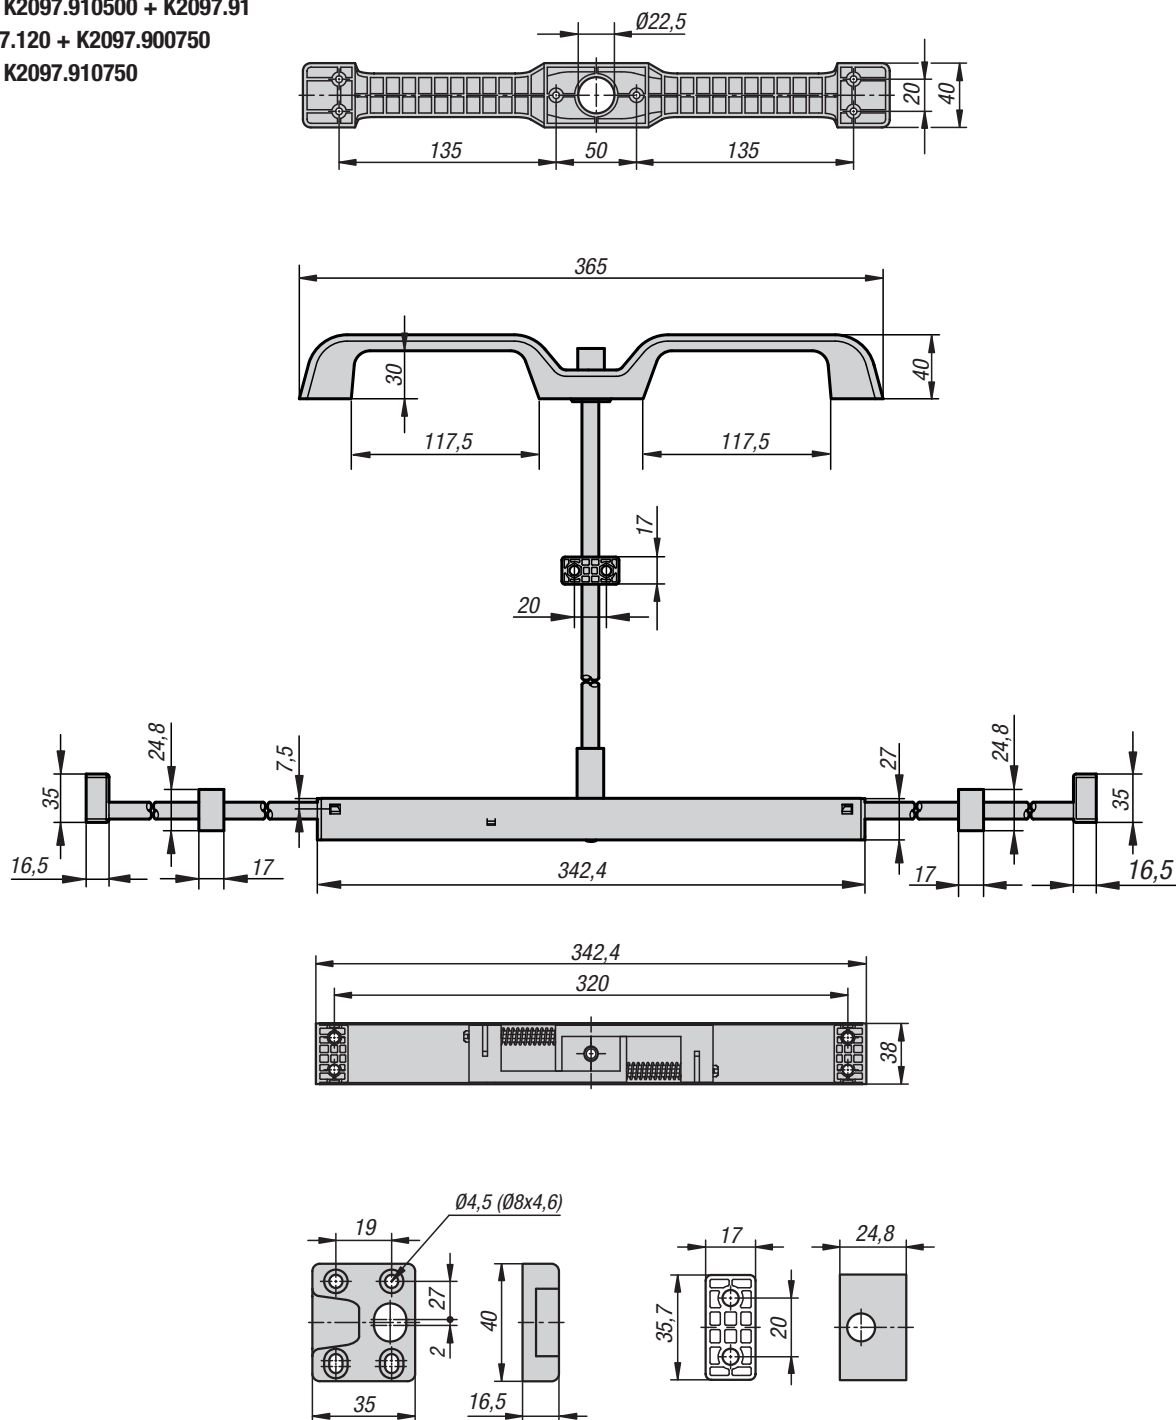




Upevnění a zajištění



Blokování v otevřené poloze nelze použít pro nadměrně vysunuté kolejnice (více než 100% vysunutí).

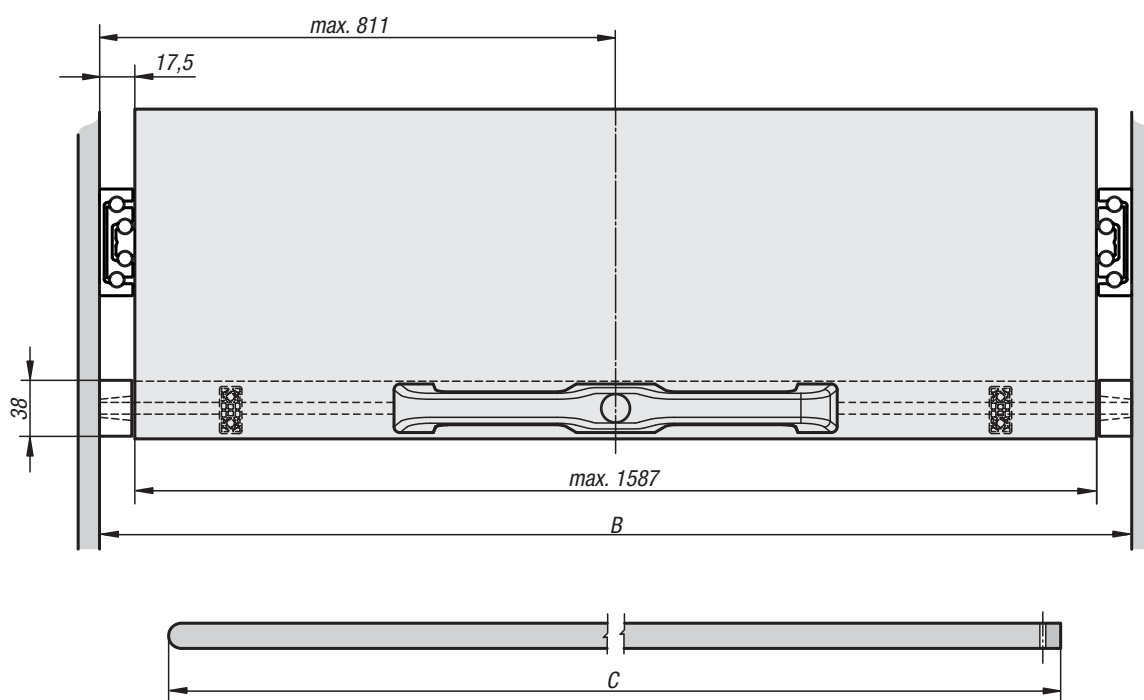

 $C = (B - 122,3) / 2$
 $C < 500$
 $C > 500$

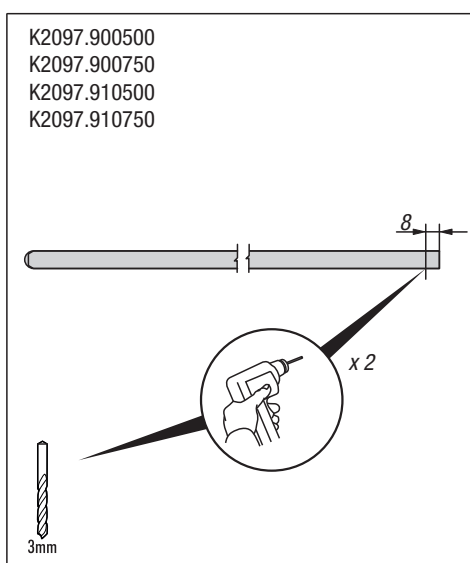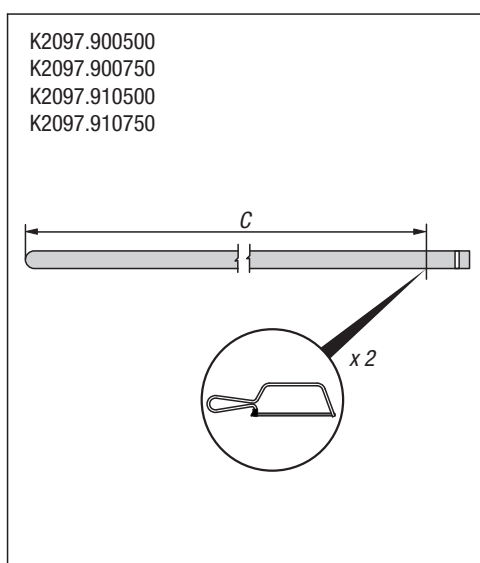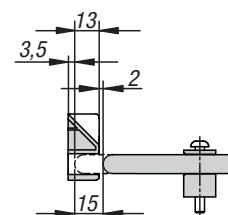

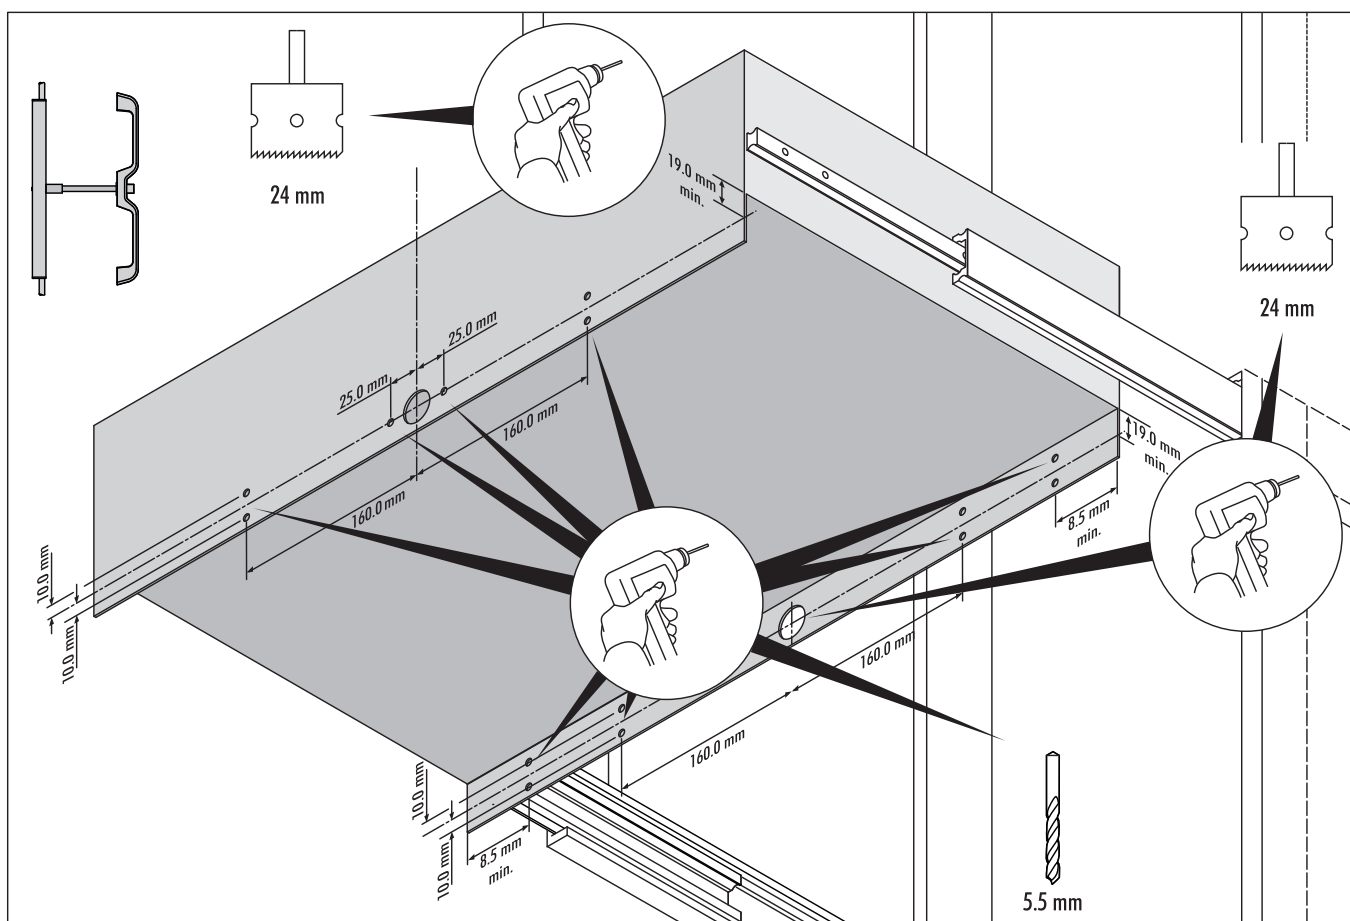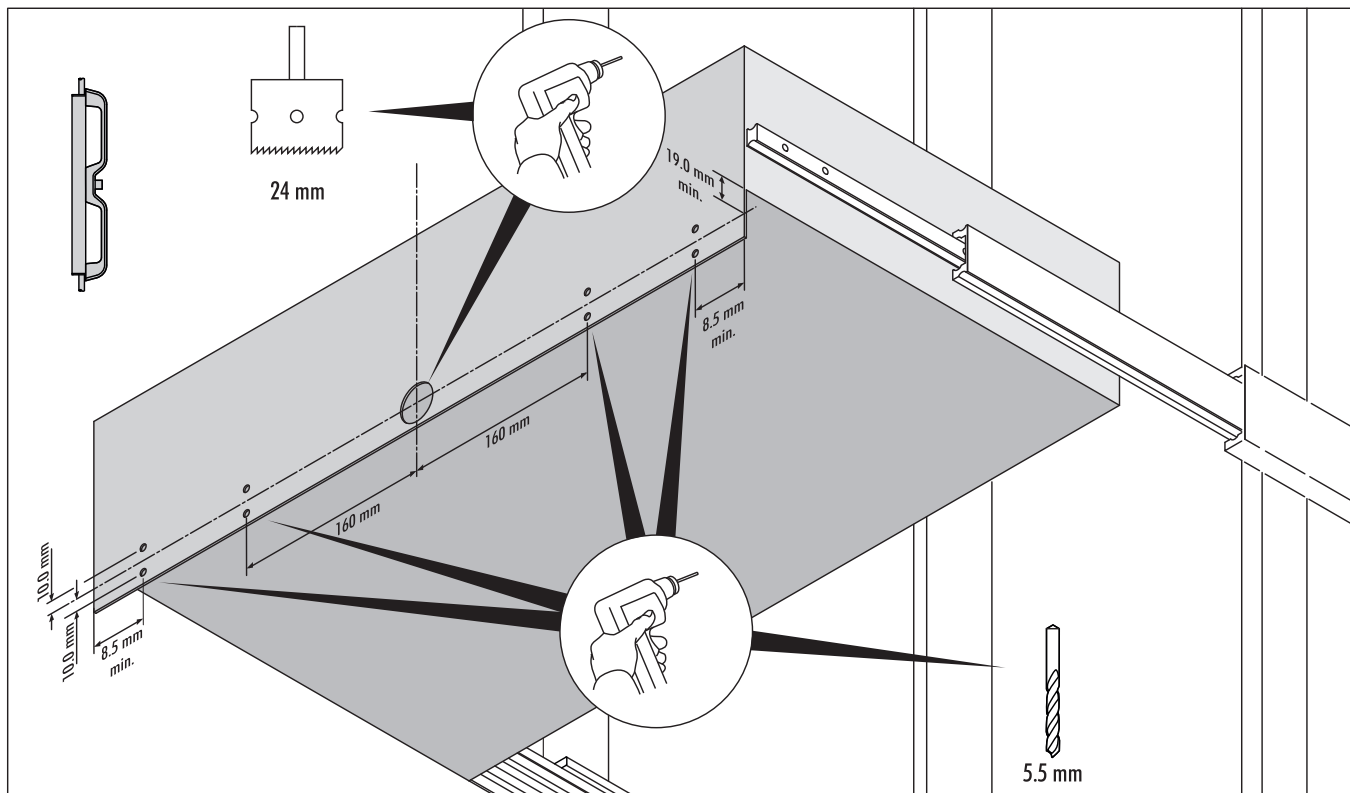

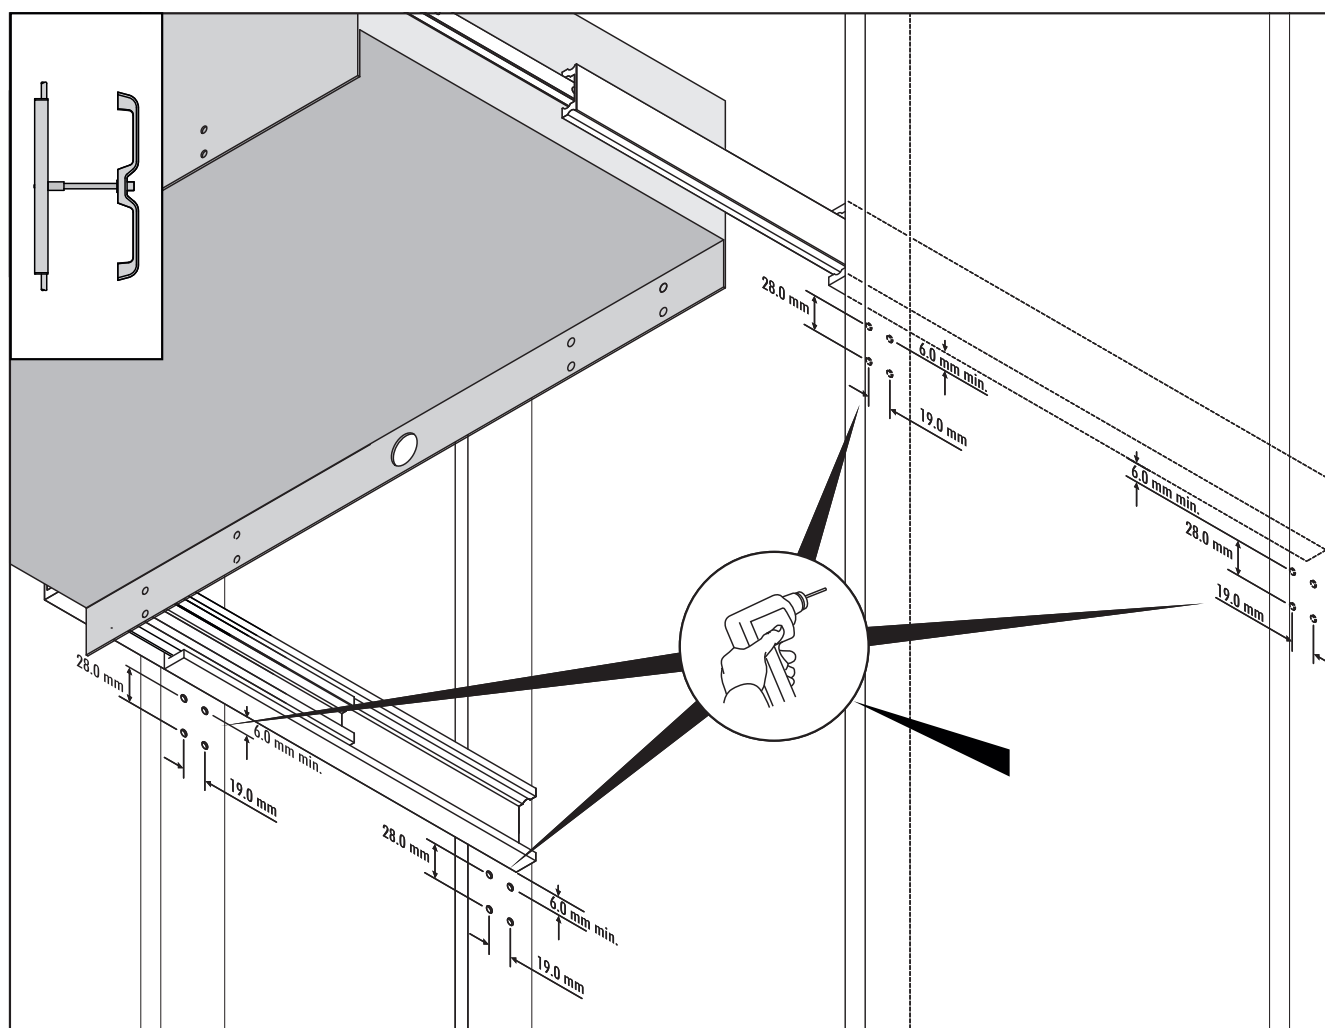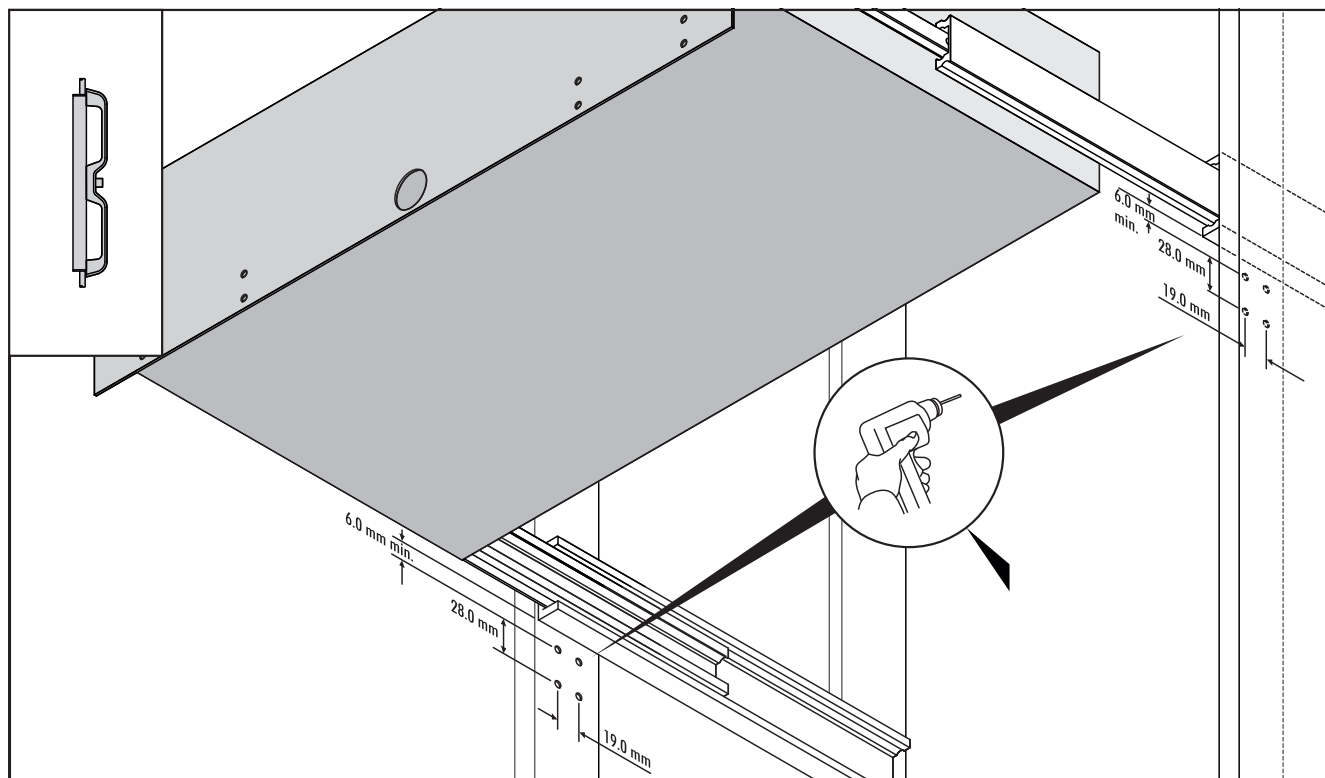

Vrtání a upevňování podle situace

